 


INSTALLATION GUIDE:

LED DOWNLIGHT
990.0293.01



IMPORTANT:

The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50 mm airspace around the control gear. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IEE wiring regulations BS 7671.


PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.

<p>A ISOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION</p> <p>ø73 mm</p> <ul style="list-style-type: none"> - Using a holesaw, cut out a ø73 mm hole on a flat, smooth surface at the required location. 	<p>B</p> <ul style="list-style-type: none"> - Fit Twist & Lock bezel.
<p>C IMPORTANT - DO NOT HOTPLUG. Connecting the luminaire to the driver without isolating the mains supply will cause irreversible damage and will invalidate the warranty.</p> <ul style="list-style-type: none"> - Connect the driver to the mains supply in accordance with the latest wiring regulations BS 7671. - For ECO dimming wiring see installation guide 990.0009.01. 	<p>D</p> <ul style="list-style-type: none"> - Feed the driver into the ceiling void ensuring it is not covered by any debris or insulating material and is correctly positioned. Driver may vary according to specification.
<p>E</p> <p>Check that the notches on the seal are aligned with the tabs on the bezel before installing the luminaire.</p> <ol style="list-style-type: none"> 1 Push back ceiling springs. 2 Install luminaire. 3 Ensure luminaire is positioned centrally and securely within cut-out for an effective seal. <p> REINSTATE MAINS SUPPLY</p>	

We reserve the right to amend any product specification without prior notice. Any alterations made to the luminaire may affect life and light output and invalidate any warranty. Luminaire complies with all safety standards set out in BS EN 60598.

INSTALLATION GUIDE:

 LED DOWNLIGHT
990.0293.01



IMPORTANT:

The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50 mm airspace around the control gear. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IEE wiring regulations BS 7671.

PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.

<p>A ISOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION</p> <p>ø73 mm</p> <ul style="list-style-type: none"> - Using a holesaw, cut out a ø73 mm hole on a flat, smooth surface at the required location. 	<p>B</p> <ul style="list-style-type: none"> - Fit Twist & Lock bezel.
<p>C IMPORTANT - DO NOT HOTPLUG. Connecting the luminaire to the driver without isolating the mains supply will cause irreversible damage and will invalidate the warranty.</p> <ul style="list-style-type: none"> - Connect the driver to the mains supply in accordance with the latest wiring regulations BS 7671. - For ECO dimming wiring see installation guide 990.0009.01. 	<p>D</p> <ul style="list-style-type: none"> - Feed the driver into the ceiling void ensuring it is not covered by any debris or insulating material and is correctly positioned. Driver may vary according to specification.
<p>E</p> <p>Check that the notches on the seal are aligned with the tabs on the bezel before installing the luminaire.</p> <ol style="list-style-type: none"> 1 Push back ceiling springs. 2 Install luminaire. 3 Ensure luminaire is positioned centrally and securely within cut-out for an effective seal. <p> REINSTATE MAINS SUPPLY</p>	

We reserve the right to amend any product specification without prior notice. Any alterations made to the luminaire may affect life and light output and invalidate any warranty. Luminaire complies with all safety standards set out in BS EN 60598.