

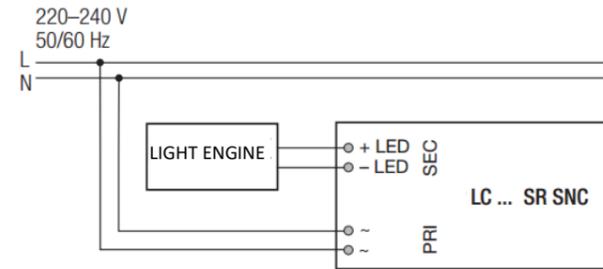


Wiring Diagrams



Fixed Output

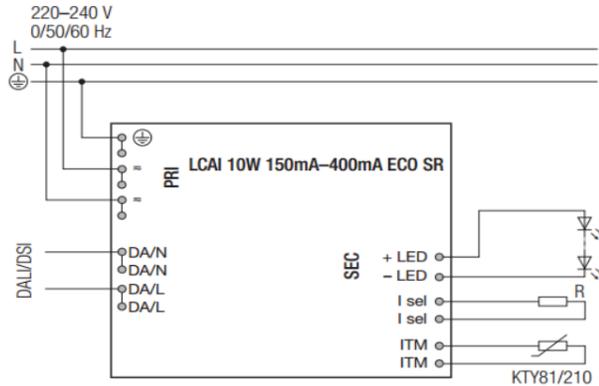

DALI Models

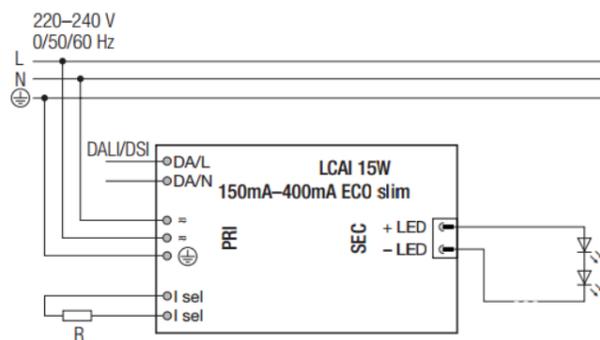

Wire DALI for switch dim (using retractive switch)

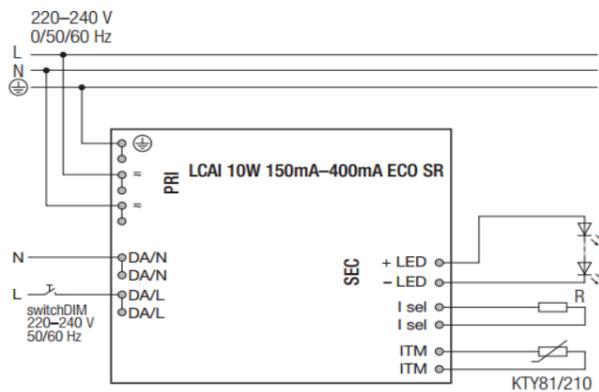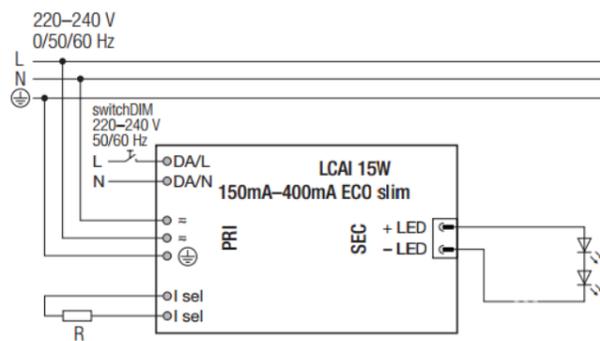

Mirage Wallwasher

Installation Instructions



SEP 2020 - REV D

990.0302.01

Whitecroft Lighting Limited

Burlington Street, Ashton-under-Lyne, Lancashire OL7 0AX

Telephone +44 (0)161 330 6811

Facsimile: +44 (0)161 331 5855

Registered No. 3848973 England

Registered Office: As above

TECHNICAL SUPPORT

Telephone: 0161 331 5700

E-mail: technical@whitecroftlight.com

<http://www.whitecroftlighting.com/>



IMPORTANT: The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50mm airspace around the luminaire and control gear. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of the IEE wiring regulations BS7671.


PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.

Product Specification

Dimensions

Round Wallwasher

Square Wallwasher

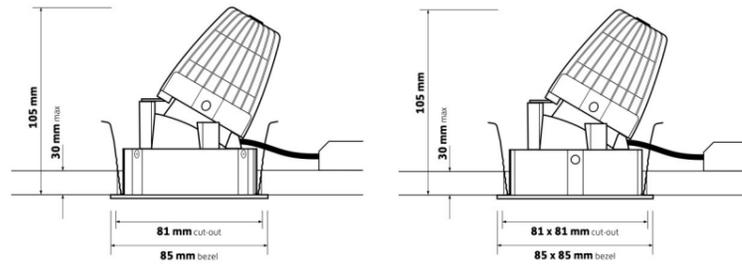


Specification

- Lamp Type:- LED
- Supply:-220-240V, 50-60Hz
- Power Output:- 8W & 14W
- Nominal Lumen Output:- 500 lm to 1000 lm
- Colour Temperature:- 3000K & 4000K
- Ingress Protection:- IP44
- Trim Colour:- RAL9003 Signal White

GENERAL INFORMATION

- 1) A qualified electrician, in accordance with IEE wiring regulations should carry out connection to mains wiring.
- 2) Ensure that the rated voltage and frequency requirements are compatible with the available mains supply.
- 3) Cleaning of reflectors and lenses should be carried out using clean, soft and lint free cloths and anti-static cleaning fluid.
- 4) Do not carry out high voltage insulation test, i.e. 500/1000v this may damage internal components.

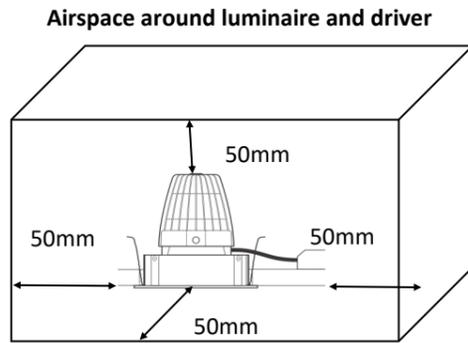


ISOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION

Ceiling thickness:- MINIMUM 3mm*, MAXIMUM 30mm

***A PATRESS IS RECOMMENDED FOR CEILING THICKNESS LESS THAN 3mm .**

<p>A Round—Cut a 81mm circular hole using a hole saw. Square— Cut a 81mm square hole . To avoid damage to the ceiling tiles it is not recommended to remove the luminaire once installed into soft ceiling types . The luminaire and driver can be maintained from the adjacent ceiling tile or by removing the whole tile with luminaire attached.</p>	
<p>B</p> <ul style="list-style-type: none"> Wire mains flex into driver according to the applicable wiring diagram on the back of this leaflet. 	<p>C</p> <div style="text-align: center;">  </div> <ul style="list-style-type: none"> Feed the driver and control gear into ceiling void, ensuring it is not covered by debris or insulating material and is correctly positioned.

METAL PAN / SOFT CEILING

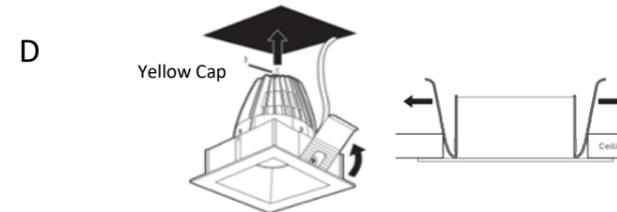

***IMPORTANT :- To avoid damage to soft ceiling types care must be taken when releasing the spring into the aperture.**

- Squeeze ceiling springs and push the fitting into the ceiling void. **It is important that the springs are held from behind and only released once the luminaire is in place.** If there is a risk of the heatsink being covered insert a yellow cap into the top of the luminaire.
- Once in place make sure the luminaire is secure in the ceiling.



Reinstate mains