

## TECHNICAL SUPPORT

Telephone: 0161 331 5700

E-mail: [technical@whitecroftlight.com](mailto:technical@whitecroftlight.com)

<http://www.whitecroftlighting.com>

**WARNING:** TO AVOID INJURY, KEEP FINGERS CLEAR OF SPRINGS WHEN REMOVING LAMP HEAD FROM CEILING

### Specification – Florin E3

Supply Voltage: 230Vac  $\pm$  10% 50/60 Hz

Supply Current: 35mA @ 230V ac

Ambient Temperature: 0°C to +35°C

Max Case Temp (tc): 60°C

Conductor size: 0.5 – 1.5mm<sup>2</sup>


Weight of Control Gear: 250g (incl. battery)

Weight of Lamphead: 50g

IP Rating of Luminaire: IP20


Average Lumen output: 150lm

Lamphead details.

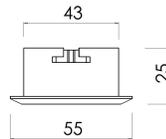

For Photometry refer to  
[www.whitecroftlighting.com](http://www.whitecroftlighting.com)

Gear module details.

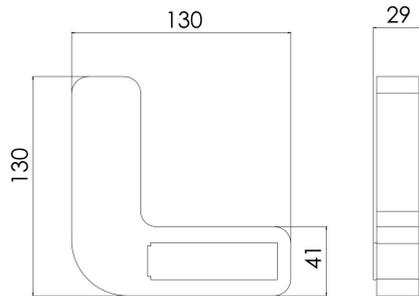

### GENERAL INFORMATION

- 1) A qualified electrician, in accordance with IEE wiring regulations, should carry out connection to mains wiring.
- 2) Ensure that the rated voltage and frequency requirements are compatible with the available mains supply.
- 3) Cleaning of lenses should be carried out using clean, soft and lint free cloths and anti-static cleaning fluid
- 4) Do not carry out high voltage insulation test, i.e. 500/1000v this may damage internal components.

### SAFETY INFORMATION

The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 0.24m is not expected.

Whitecroft  
lighting

## Florin E3 Recessed COMEPS Installation Leaflet



Please note: All images shown are for illustration purposes and should be used only for reference.



**Whitecroft Lighting Limited**

Burlington Street, Ashton-under-Lyne, Lancashire OL7 0AX  
Telephone +44 (0)161 330 6811 Facsimile: +44 (0)161 331 5855

Registered No. 3848973 England

Registered Office: As above

June 2024 - Rev C

## General Description

The Florin E3 Recessed is a stand-alone COMEPE (DALI) LED emergency lighting kit incorporating driver and battery pack in a separate plastic housing. The lamphead assembly, connected via a 270mm wiring loom, contains a high-power white LED and indicator LED for emergency use only.

The LED control gear has reinforced insulation between the supply and the battery circuit, and a battery charger with short circuit protection that will continue to operate when the short is removed.

### Batteries (where applicable)

The luminaire includes a 6.4V 18650 Lithium Iron Phosphate 1.8Ah rechargeable battery pack for 3 hour operation. When the luminaire no longer meets 3 hours duration replace the batteries, observing the battery polarity. **Permanent damage to the control gear will occur if they are reversed.**

### Relevant Standards

EN 61347-2-7	Lamp control gear
EN 61347-2-13	LED control gear
EN 60598-2-22	Luminaire

### IMPORTANT:

Please ensure that the information contained in this leaflet is passed on to the user/maintenance engineer.

Mark the luminaire with the date of commissioning in the space provided on the label.

The battery lead should only be connected at the time of commissioning.

When the supplies and battery leads are connected, all white covers should be screwed into place to prevent electric shock.

The LED is non-replaceable. Contact Whitecroft Lighting in the unlikely event of a failure.

### Operation

Upon connection of a permanent mains supply the indicator LED lights to show the battery is receiving charge. Following an initial charging period of 24 hours the unit will be capable of providing 3 hours emergency duration.

## Installation

The luminaire must be installed by a qualified person in accordance with the current building and wiring regulations. Luminaires comply with the EMC directive in both modes of operation, mains and emergency.

A Ø45mm hole should be cut in the ceiling prior to installation. This product is suitable for ceiling thicknesses of 10-25mm. Where installing into thin or soft ceiling tiles, an additional pattress may be required to ensure that the lamphead fits securely. This should be a support panel, to be fitted behind the ceiling, cut from suitable sheet material with a hole drilled to match the luminaire installation aperture (by others).

The minimum ceiling void is 175mm based on 10mm ceiling tile.

### To Install

1. Fill in the commissioning date on the control gear label.
2. Remove the mains supply clamp/cover from the white 3-way mains connector by undoing the 2 screws.
3. Feed the mains supply cable through the cut-out in the ceiling and connect to the control gear terminal block as follows:
  - L – Un-switched Live
  -  - Earth
  - N – Neutral
4. Replace the cable clamp/cover and tighten the 2 screws.
5. If DALI is required, remove the clamp/cover from the black 2-way connector by undoing the 2 screws.
6. Feed the DALI bus cable through the cut-out in the ceiling and connect to the 2-way terminal block
7. Replace the cable clamp/cover and tighten the 2 screws.
8. Feed the connectors, Banana pack into the ceiling and fix the lamphead assembly into the ceiling using the 2 springs.

## Automatic Commissioning

Please note there is no need to do a manual test on this product.

If in the unlikely event a manual test needs to be undertaken please ensure it has completed the commissioning phase as per the table below.

Do not connect the batteries until there is a **reliable** permanent mains supply present as a mains interruption will reset the commissioning test clock.

The commissioning test will start when the permanent supply and batteries are connected.

Commissioning phase table

Stage	Hours	Status	LED Indication
1	upto 24	Battery charging	Flashing green
2	3	Discharge test	Flashing green
3	24	Battery charging	Flashing green
4	0	Commissioning complete	Constant green
Total	51		

## TEST

COMEPE (DALI) luminaire local bi-colour LED indicator status

Green LED	Permanently on	System OK/mains operation mode
	Slow flash	Duration test/commissioning
	Fast flash	Function test
Red LED	Permanently on	LED luminaire fault
	Slow flash	Battery/test failure
	Fast flash	Battery charging failure

Slow flash – a flash every 2 seconds, Fast flash – a flash every 0.5 second

Note that start times of the tests are set automatically to ensure random testing of the units. As a consequence, tests may occur at any time, and caution should be exercised in situations where this may be inconvenient, such as hotels and hospitals.

*Please note: All images shown are for illustration purposes and should be used only for reference.*