
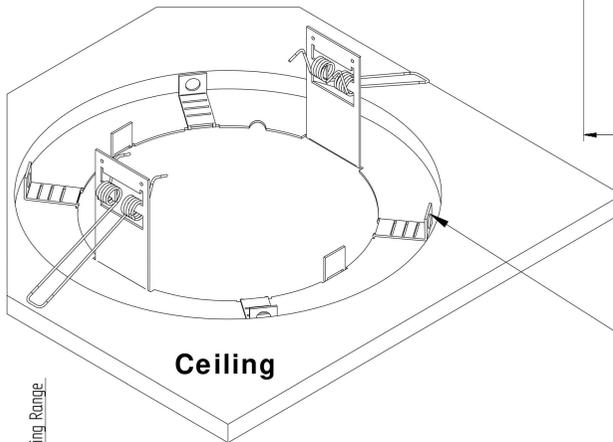


SPECIFICATION


Finish	RAL 9003
Materials	Mild Steel
Weight	0.3Kg. + Fitting
Ingress protection	IP20

Step 1 - Ensure that the hole trying to cover is within the the Minimum and Maxiumum Range

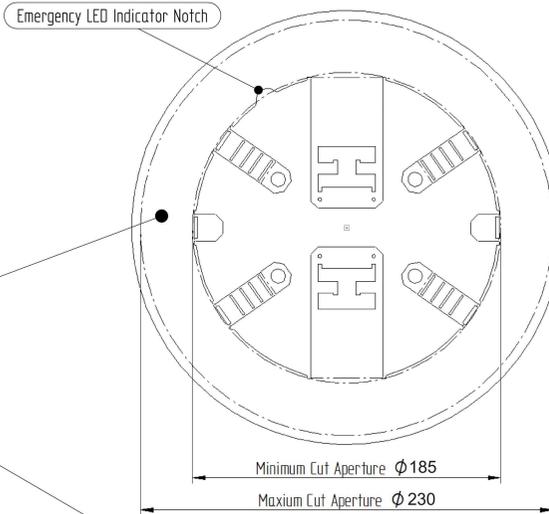


Step 2 - Fold 4 tabs as shown to centre the bezel in the hole there are a number of different easy folds for different diameters select bend closest to your hole size

Step 3 - Fold back the springs on the retro fit bezel and place them through the ceiling void and release so that the bezel is held up against the ceiling

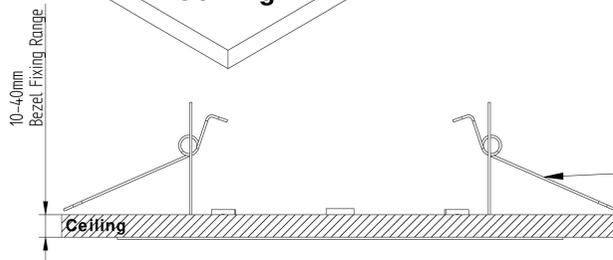

Step 4 - Wire up the driver from the product through the aperture, then install the fitting by bending up the springs and instering them into the void at 90 degrees from the retro fit bezel springs and releasing the product so that it pulls up to the ceiling.

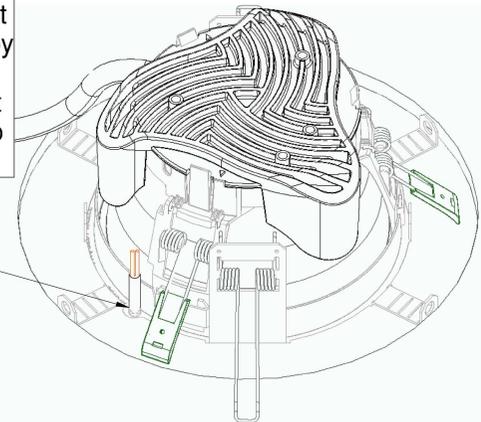

TECHNICAL SUPPORT


Telephone: 0161 331 5700

Email: technical@whitecroftlight.com

<http://whitecroftlighting.com/>



Esprit Retro Fit

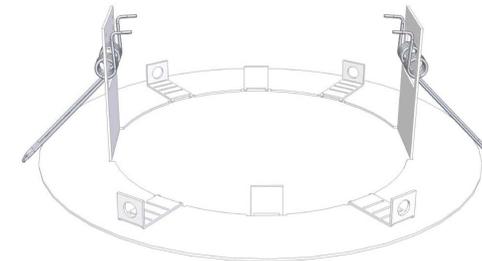

Installation Instruction

PK/ESPRITRETRO-IL

JULY 2024 - REV B



Whitecroft Lighting Limited

Burlington Street, Ashton-under-Lyne, Lancashire OL7 0AX
Telephone +44 (0)161 330 6811 Facsimile: +44 (0)161 331 5855
Registered No. 3848973 England Registered Office: As above